

# Nixie tubes clock

# $(For IN12 \_M4)$

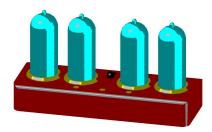

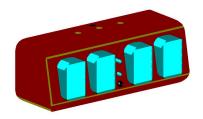

### Introduction of the clock

#### ■ The clock parameters

voltage : DC5V
electricity : <400ma</pre>

**size**: 132mm(L) \* 50mm(W) \* 50mm(H)

#### ■ The warranty treaty

- # Clock non-manual damage is guaranteed for one year and the warranty is required to keep the internal label intact
- # Wearing parts such as appearance and glass are not covered by warranty
- # Each clock has its own sales card as proof of sale. Do not tear, alter or discard it
- # If the warranty period is exceeded or man-made damage is caused, the shop will provide repair; Charge for materials and hours
- # Because the damage is very serious, it cannot be repaired. Please negotiate for a new one

#### ■ Important note

- # Users are strictly forbidden to disassemble and repair, once disassembling or repairing, the shop will not after sale.
- # Do not use in damp environment
- # Children are not allowed to touch the clock.
- # Power USB power interface is fragile, do not drag to avoid damage
- # This clock is a DIY work, there are some flaws or imperfections, please include
- # Please believe that we will try our best to make each work present its best condition

#### ■ Contact information

QQ:4164420 WeChat: dls0709 E-Mail: dls20@qq.com

Please scan the qr code below and follow our WeChat public number to make it more convenient to contact us:

Our website: www.diym.vip

### Clock APP/ small program acquisition and use

### Applet of WeChat

WeChat scan the following two-dimensional code or search the small program "果然时钟" can be opened



#### Android APP download

The qr code below scan or enter the webpage to download the android APP installation package

: http://www.diym.vip/guoran.apk



Open the software and look for the clock



Select the clock to connect to



Open the interface of the software:






**Notice:** 1. If the software fails to load properly, please close the software and try again.


**2.** If the clock cannot be found, it may be the compatibility problem between mobile phone and software, please change the mobile phone for testing.

### Clock key

#### 1, Clock touch buttons and functions

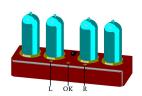



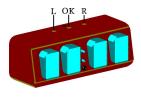


IN14/IN8\*nixie tube

|   | Ket   | operation              | function   |
|---|-------|------------------------|--|
| 1 | L     | click                  | Turn backlight on and off; Parameter adjustment "+"  |
| 2 | OK    | click                  | Turn on and off the clock; Parameter adjustment "OK" |
| 3 | R     | click                  | Display date; Parameter adjustment                   |
| 4 | L, R  | At the same time press | Enter and exit clock Settings                        |
| 5 | OK, R | At the same time press | Turn on the timer                                    |

#### IR remote control


### Remote control button function

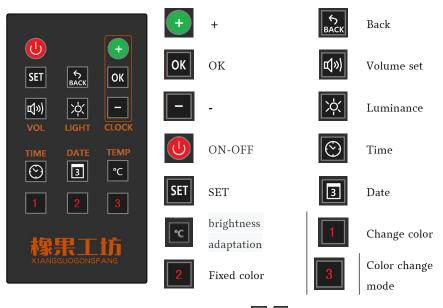

**Notice:** Button for backlight control

# Enter the set action

- 1. There are two ways to access the Settings function
  - 1: Simultaneously press the clock to touch the button "L, R"
  - 2: Press the APP/ remote control button " "

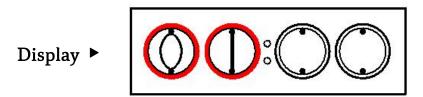


2. There are two ways to exit the Settings function (Note: do the following under the main menu shown above)

1: Simultaneously press the clock to touch the button "L, R"


2: Press the APP/ remote control button

## on" SACK"

### 3, Set display content

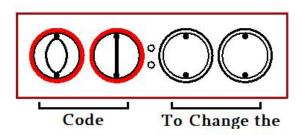

### 4. Key function when setting

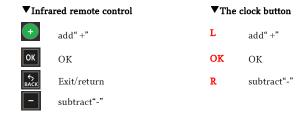

**Note:** in the setting interface, the clock has voice prompts for each function. Please operate with voice prompts.LED backlight changes with Settings in real time, and red LED light indicator sets function code; The green LED indicates the parameters being changed.

# Set the project function reference table

| Code | Project                      | Parameter | Corresponding function  |   |
|------|------------------------------|-----------|---|---|
| 01   | TT:                          | 1         | Connect to the phone bluetooth and set the time automatically       |   |
|      | Time set                     | 0         | Manually set the year, month, day, week, and second in turn         |   |
| 02   | Alarm 1                      | 1         | open  | Turn on and adjust the alarm time   |
|      |                              | 0         | close   | Shut the alarm clock 1  |
| 00   | Alarm 2                      | 1         | open  | Turn on and adjust the alarm time   |
| 03   |                              | 0         | close   | Shut the alarm clock 2  |
|      | Digital variation<br>pattern | 0         | Normal change   |   |
| 04   |                              | 1         | Cross the gradient  |   |
|      |                              | 2         | Crossbar transition   |   |
|      |                              | 3         | else  |   |
| 0.5  | Colons of display            | 0         | close   |   |
| 05   |                              | 1         | open  |   |
|      | The brightness Set           | 0         | automatic adjustment  |   |
| 06   |                              | 1         | Level 10 manual adjustment  |   |
| 07   | Volume set                   | 0~7       | Prompt sound volume setting,"0" silently                            |   |
|      | Display mode                 | 1         | Display: hours, minutes, seconds                                    |   |
|      |                              | 2         | Display: hour, minute, week   |   |
| 08   |                              | 3         | Display: Month, day, week   |   |
|      |                              | 4         | Custom display  |   |
|      | Hour format                  | 12        | 12-Hour format  |   |
| 09   |                              | 24        | 24-Hour format  |   |
|      | Timing switch                | 1         | Starting up Time,The time when the clock is automatically turned on |   |
| 10   |                              | 2         | Shutdown Time,The time when The clock shuts down automatically      |   |
|      | Hourly prompt                | 0         | close   |   |
| 11   |                              | 1         | open  |   |
|      | Night mode                   | 0         | close   | Function: When the brightness level is less than                                      |
| 12   |                              | 1         | open  | 2, do not broadcast time  |
| 13   | Alarm bells music            | 1~6       | 6 alarm clock music   |   |
| 14   | LED weekly mode              | 0         | close   | Note: The backlight represents the week with red, orange, yellow, green,              |
| 14   |                              | 1         | open  | cyan, blue and purple. The LED color cannot be changed manually after being turned on |
| 1.5  | External switch              | 0         | close   | Reserve the on and off interfaces for peripherals                                     |
| 15   |                              | 1         | open  | or DIY developers   |
| 1.0  | Nixie tubes                  | 0         | Closed, not recommended   |   |
| 16   | protection                   | 5~15      | Recommended 5 minutes   |   |
| 4.5  | Language                     | 0         | Voice broadcast in Chinese  |   |
| 17   |                              | 1         | Voice broadcast in English  |   |
| 18   | Reset the clock              | 00        | Do not revert to the default state                                  |   |
|      |                              | 11        | Restore the clock to its default settin                             |   |